


Technical Newsletter nº 7/2016 2017-01-31

BACKUP AND RESTORE MODULES

All ONLY modules have a non-volatile memory divided into two parts.:

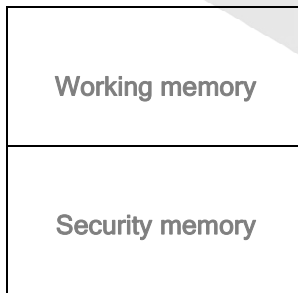

The working memory is the one where the current settings are saved.
The security memory is the one where known configuration is copied and kept unchanged.

Backup Procedure



On the front of the D-FDRV module there are keys with names from A to E.
To perform a Backup, press in sequence B A C B A C.
The current configuration in the working memory is copied to the backup memory.
The module indicates that the command was correctly sent to the BUS by turning the 2 front LEDs off and on 2 times in a row.

Restore procedure

To perform a *Restore*, press in sequence C A B C A B.
The backup memory configuration is copied to the working memory.
The module indicates that the command was correctly sent to the BUS in the same way as described previously.