# - INTERFACE



In Wall

Interface module for keypads ONLY.

Т	e	cł	n	ic	a	I	data	
	_			_			L	

Power supply Consumption	110/230V~ 50/60Hz < 0.5W
Frequency (1)	868.3MHz
Ingress protection IP	IP20

#### Description

The C-IN\_ is an interface module enabling the snapping of any Only keypad  $^{(2)(3)}.$  It is indicated in places where it is not necessary to switch any load but a keypad is required.

Technical Details

### Application

Interface between the Only automation system and respective keypads.

#### Installation

The C-IN\_ is to be mounted in flush-mounting electrical box (60mm between fixing points).

## Available modules


Name	Radio Frequency
C-IN	
<sup>(1)</sup> C-IN-RF	✓

## Features

Individually configurable inputs in operation modes: Toggle, On, Off, Time, Delay or Scenario.

Radio Frequency Receiver/Transmitter (1)

Push-wire terminal connections with derivation

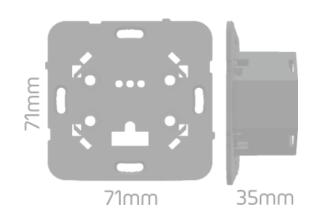



Danger - Electric Shock Risk! Switch off the power before any intervention. Handling by qualified and authorized persons only.

Enancer Electrónica, Lda Rua Max Grundig, 9 4705-820 Braga Portugal Tel: +351 253 221 484 info@only-smartbuildings.com  $^{(2)}$  Not compatible with OT-CLIMA-XY, OT-CLIMAA-XY, OT-FM-XY, OT-FMA-XY, OT-16S-XY and OT-16SD-XY

<sup>(3)</sup> C-IN\_ must have firmware version  $\geq$  to V4.0 to work with OT-MF-XY

Subject to change without notice

C-IN\_R06